

Table of Contents

Notices	iii
Disposal instructions	iii
FCC notice	iii
Important safety instructions	iv
Laser compliance statement	vi
Lithium battery statement	vi
Macrovision® statement	vi
Year 2000 compliance statement	vii
 Welcome	 1
Major benefits	1
 Before You Start	 2
Safety instructions	2
Setting up the system	3
Placement tips	3
 System Overview	 5
Computer rear view	5
Computer front view	6
Installing new components	8
Opening The Case	8
 Frequently asked questions	 9
 Taking care of your computer	 11
Important tips	11
Cleaning and servicing	11
Asking for technical assistance	12

Table of Contents

Messages	39	Gallery	48
Opening the Messaging Screen.....	39	Opening the Gallery.....	48
Sending a Message.....	39	Working With Albums.....	48
Replying to a Message.....	39	Working With Pictures.....	49
Forwarding a Message.....	40	Playing Videos.....	49
Deleting Messages.....	40	Music	50
Changing Message Settings.....	40	Copying Music Files to Your Phone.....	50
Calendar	42	Viewing Your Music Library.....	50
Viewing Your Calendars and Events.....	42	Playing Music.....	51
Creating an Event.....	42	Managing Playlists.....	52
Editing, Deleting, or Sharing an Event.....	42	Video Player	53
Changing Calendar Settings.....	43	Opening the Video Library.....	53
Browser	44	Playing and Controlling Videos.....	53
Opening the Browser.....	44	Managing Video Files.....	54
Setting the Home Page.....	44	FM Radio	55
Adding a Bookmark.....	44	Scanning and Saving Channels.....	55
Viewing Browser History.....	45	Listening to FM Radio.....	55
Changing Browser Settings.....	45	Deleting a Saved Channel.....	55
Camera	46	Setting Your Radio Region.....	56
Capturing a Photo.....	46	Sound Recorder	57
Recording a Video.....	47	Recording a Voice Memo.....	57
Customizing Camera and Video Settings.....	47	Playing a Voice Memo.....	57

Table of Contents

More Apps	58	Specifications	81
Calculator.....	58		
Clock.....	58		
Downloads.....	59		
File Manager.....	59		
Weather.....	59		
Settings	61		
Profile.....	61		
General Settings.....	61		
Device.....	63		
Personal.....	64		
Upgrading the Phone Software	66		
Troubleshooting	67		
For Your Safety	70		
General Safety.....	70		
Radio Frequency (RF) Energy.....	71		
FCC Regulations.....	72		
Hearing Aid Compatibility (HAC) Regulations for Mobile Phones.....	73		
Distraction.....	74		
Product Handling.....	74		
Electrical Safety.....	77		
Radio Frequency Interference.....	79		
Explosive Environments.....	80		

Using Your Remote Control



TV POWER: Turns on/off your TV.

ALL POWER: One button to turn on/off both the TV and set-top box.

VOL +/-VOL -: Turns the volume up and down on the uDTA or set-top box. After your remote is programmed, these keys operate the TV's volume control.

CHAN +/-: Selects the next higher or lower channel.

MUTE: Turns the sound on and off.

VIDEO CONTROLS: Controls On Demand or DVR viewing — Play/Pause, Fast-Forward, Rewind and Exit/Stop.

REPLAY: Jumps back 15 seconds within an On Demand or DVR program.

REC: Records content currently being viewed.

NOTE: Some features above require a DVR set-top box and/or access to On Demand programming.

XFINITY/MENU: Enters the on-screen guide menus.

GUIDE: Shortcut to TV listings.

OK: Selects the highlighted item within the guide.

LAST: Returns to the previous channel or guide screen.

INFO: Provides a description of a program.

EXIT/STOP: Exits guide screens and returns you to TV viewing.

SETUP: Programs your remote control to your TV, set-top box or uDTA.

A,B,C,D: Context sensitive control keys used in advanced setups.


NOTE: Features above require an on-screen programming guide not available with all devices.

KEYPAD (0-9): Select the channel you want to view (e.g., 0-9, or 0-2-6).

Remove side cover

Process:


1. Put the desktop on the worktable lightly.
2. Release left side cover with 2 screws then remove left side cover.

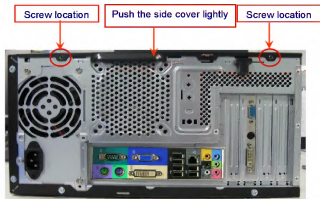

Remove CPU fan pipe

Process:

1. Release the CPU fan pipe.

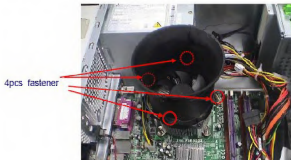

6 Hooking Up the TV/VCR


1

Hook up your TV/VCR using one of the connections shown.

A.

Hooking Up Your TV/VCR With a Cable Signal or Outdoor Antenna

Connect a Cable signal or an antenna to the ANT(enna) Jack.

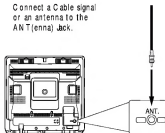


B.

Hooking Up Your TV/VCR With a Cable Box

To view any channel, set the TV/VCR to the Cable Box output channel (channel 03 or 04). Then, select channels at the Cable Box.

Connect the Cable signal to the IN Jack on the Cable Box.

Connect an RF coaxial cable (75-ohm, not supplied) to the OUT Jack on the Cable Box and to the ANT(enna) Jack on the TV/VCR.

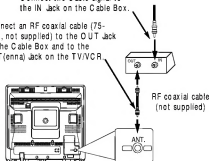


C.

Hooking Up Your TV/VCR With an Indoor Antenna

To install a rod antenna (not supplied), push the stem of the antenna into the antenna hole on the top of the TV/VCR. Connect the antenna wire to the ANT(enna) Jack on the back of the TV/VCR as shown. Extend the antenna and adjust its length, direction, and angle for the clearest picture.

Rod Antenna
(not supplied)

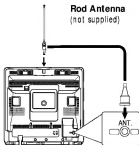

Compaq Advantage - Compaq has taken a leadership role in creating and defining V1 Architecture. Compaq, Intel, and Microsoft Corporation developed primary work on the V1 Architecture specification. This initiative illustrates Compaq's drive to build upon industry standards and to provide the enterprise level computing platforms and performance that enterprise customers demand.

- **Fibre Channel** - is a key technology for the system interconnect, the serial drive interface and high-speed networking in delivering bigger, faster, more reliable network data storage solutions. It provides opportunity for the integration of primary and secondary storage as well as shared storage between multiple users.

Key Benefits - Fibre Channel's performance is 10 times faster than fast SCSI, 5 times faster than Fast-Wide SCSI, and 2 1/2 times faster than Ultra-SCSI. Its performance is unmatched.

Compaq Advantage - Compaq is the world's second largest storage vendor. Compaq's Fibre Channel Storage System will be the first of a new generation of storage products based on Fibre Channel technology. Through an early access program, Compaq currently has hundreds of Fibre Channel Storage products in evaluation at leading companies and partners around the globe. Compaq's Fibre Channel Storage System will also provide greater availability for business critical systems through support for cluster server solutions such as Microsoft Cluster Server (MSCS). IT departments that expect rapid growth in storage capacity will benefit from the superior manageability, backup, storage consolidation, and scalability of Fibre Channel solutions. The recent partnership between Compaq and Hewlett-Packard Components Group (HPCG) enables the two organizations to share interoperability information in order to establish Fibre Channel as a stable platform for highly reliable, high-speed storage applications—making it easier for customers to adopt the Fibre Channel interconnect as an industry standard.

Compaq is one of the sponsors of the American National Standards Institute (ANSI) Committee responsible for developing the Fibre Channel standards. Fibre Channel technology will deliver higher reliability, greater capacity, and higher performance than those servers with traditional SCSI solutions.

- **I₂O Readiness** - The I₂O Initiative defines a standardized general architecture for intelligent I/O. Its basic objective is to provide an industry-wide I/O subsystem architecture that is independent of both the specific device being controlled and the host operating system.

Key Benefits - The potential benefits of I₂O products will be more consistent OS support, a shorter time to market for new products because of reduction in the number of drivers needed, greater OS stability, and potential improvements in overall system performance through lower host processor overhead. The I₂O Initiative also provides increased system scalability with the ability to run more devices per server.

Compaq Advantage - Compaq was first to introduce server-optimized intelligent I/O and memory architectures and continues to produce leadership intelligent I/O adapters such as the SMART-2 array adapters. Compaq delivers its I₂O solution in a flexible, scalable architecture that will allow customers to scale the performance and functionality of the I/O in their servers. As one of the original members of the I₂O Steering Committee, Compaq's extensive experience and leadership in developing intelligent I/O solutions can be used to help advance a unifying standard for eliminating potential I/O issues of the future.

- **Compaq Recovery Server Option** - is a low-cost option, which can be configured in either of three ways, providing protection against specific server component failures or even



⁷ Refer to White Paper *Intelligent I/O and the I₂O Initiative* Doc. No. ECG040.1097 for more information.

Special Features

JEANS

High wash ability, suitable to wash heavy or soiled clothes

QUICK

Washing time is short. Suitable for washing lightly stained clothes such as office clothes

DELICATE

Recommended for washing delicate fabrics like wool and silk.

BULKY

Washing ability is strong, recommended for washing heavily soiled clothes

TUB CLEAN

Cleans the tub. Using this program will keep the washer tub clean and germ-free too.

MINI WASH

Ideal for washing small load of laundry, uses low water level.

AIR DRY

Use this function to dry clothes without heating to achieve the result of being dried in a room.

Special Features

Fuzzy Logic Control Function

Under the Fuzzy Logic Control Function, the machine automatically detects the amount of laundry and automatically sets the water level based on the load. If user choose water level before starting operation, the machine will cancel the Fuzzy Logic Control Function.

Power Failure Memory Function

If the power supply suddenly gets cut off during operation, the machine will remember the current operation state and once the power supply restored, the machine will resume to the last operation.

Only for washers having these two functions

Energy test program description

Energy test program operation:

1. Press the power switch;
2. According to procedures keys, choose **NORMAL** program;
3. Adjust washing water quantity to its highest level;
4. Press the start button

XP-R207

COMPACT DISC PLAYER
REPRODUCTOR DE DISCOS COMPACTOS


INSTRUCCIONES DE MANEJO

SA-HC1-942-01

000824AYD-CX

Printed in Hong Kong

AIWA CO., LTD.



Las letras subrayadas a lo largo de este manual corresponden a las mismas letras en las figuras.

PRECAUCIONES

Para mantener buenas prestaciones

- No utilice el aparato en lugares muy calientes, fríos o húmedos. Especialmente, no utilice o instale el aparato en los siguientes lugares.
- en lugares muy húmedos como en el baño
- cerca de la calefacción
- en un lugar expuesto a los rayos del sol (por ejemplo en un coche estacionado donde puede calentarse mucho)
- cerca de fuentes magnéticas fuertes, por ejemplo televisores, altavoces o imanes
- donde hay mucho movimiento o vibración, sobre el cubretablero del coche o en un estante poco estable

Para su seguridad

- No trate de desarmar el aparato. Los rayos láser del receptor óptico son peligrosos para los ojos.
- Compruebe que los pasajeros u otras materias extrañas no entren en el reproductor.
- No deje caer el aparato ni expóngalo a un golpe fuerte.
- Para no ensuciar la lente del receptor con polvo cierre la tapa del compartimento del disco después de usar. No toque la lente.
- Si no se escucha el sonido durante la reproducción de un disco, NO levante el volumen porque la música puede empezar a un volumen alto. Gire el control de volumen a su nivel más bajo antes de empezar a reproducir y gire lentamente hasta subir al volumen deseado.

Notas para escuchar con los auriculares

- Escuche a un volumen bajo para no dañar sus oídos.
- No escuche con los auriculares cuando ande en bicicleta. Puede ser un peligro para el tráfico.
- Se debe tener mucho cuidado o dejar de utilizar temporalmente en casos potencialmente peligrosos, por ejemplo cuando camina, corre, etc.
- Utilice correctamente, L para el izquierdo y R para el derecho.

Nota sobre la condensación

Si se lleva el aparato repentinamente de un lugar frío a uno caliente puede condensarse la humedad en la lente del receptor y puede funcionar mal o tener problemas en la reproducción.

En este caso, deje descansar el aparato unas horas y trate de volver a reproducir.

FUNCIONAMIENTO CON PILAS → A

Abra el portapilas y coloque dos pilas alcalinas tamaño AA (LR6) con las marcas **+** y **-** correctamente alineadas.

Cambio de las pilas

El indicador OPD/BATT cambia de F (verde) a M (naranja) a E (rojo) según la carga de las pilas. Cambie las pilas cuando se encienda la luz E (rojo). Si se sigue utilizando el aparato después de que se encienda la luz E (rojo), aparece "LO-BATT" y deja de funcionar.

Vida de las pilas (con pilas alcalinas LR6)

El ajuste del interruptor E-A-M-G	Vida de las pilas
48	Aprox. 20 horas
12	Aprox. 19 horas
OFF	Aprox. 15 horas

La vida de las pilas depende de la forma de utilizar el aparato.

Si se sale la tapa del portapilas → B

Notas sobre las pilas

- Compruebe que las marcas **+** y **-** estén correctamente alineadas.
- No mezcle diferentes tipos de pilas o una pila nueva con otra vieja.
- Para que no haya fugas de electrolito o explosión no cargue las pilas, caliente o desarme.
- Cuando no utilice las pilas, sáquelas para evitar que se gasten inútilmente.
- Si se produce una fuga del líquido de las pilas, limpie a fondo para secarlas.

**Figure 3. Accessories
PARTS**



TOOLS



For Movies previously shown in theaters:**• Movie Ratings:**

Unlocked

G and above	(general audience)
PG and above	(parental guidance suggested)
PG-13 and above	(13 years and up)
R and above	(restricted)
NC-17 and above	(18 years and up)
X	(adult)

If you set PG-13 and above: G and PG movies will be available, PG-13, R, NC-17 and X will be blocked.

For Television programs including made-for-TV movies:**• General TV Ratings:**

Unlocked

TV-G and above	(general audience) (individual categories do not apply)
TV-PG and above	(parental guidance suggested)
TV-14 and above	(14 years and up)
TV-MA	(mature audience)

• Children TV Ratings:

Unlocked

TV-Y and above	(youth) (individual content categories do not apply)
TV-Y7	(youth, 7 years and up)

• Content Categories:

Dialog - sexual dialogue	(applies to TV-PG and above, TV-14)
Language - adult language	(applies to TV-PG and above, TV-14 and above, TV-MA)
Sex scenes - sexual situations	(applies to TV-PG and above, TV-14 and above, TV-MA)
Violence	(applies to TV-PG and above, TV-14 and above, TV-MA)
F violence - fantasy violence	(applies only to TV-Y7)
All Ratings	(blocks all viewing)

This page intentionally left blank

1.6 Accessories

Advantech offers a complete set of accessory products to support the PCI-1784 card. These accessories include:

Wiring Cable


- **PCL-10137H** The PCL-10137H shielded cable is specially designed for PCI-1784 cards to provide high resistance to noise. To achieve a better signal quality, the signal wires are twisted in such a way as to form a “twisted-pair cable”, reducing cross-talk and noise from other signal sources. Furthermore, its analog and digital lines are separately sheathed and shielded to neutralize EMI/EMC problems.

Wiring Boards


- **ADAM-3937** The ADAM-3937 is a 37-pin D-type wiring terminal module for DIN-rail mounting. This terminal module can be readily connected to the Advantech PC-Lab cards and allow easy yet reliable access to individual pin connections for the PCI-1784 card.

7.1 Wiring a Damper Motor to the Heater's Control Module


24 Vac Power Open / Power Close Damper Motor



24 Vac Power Open / Spring Return Damper Motor



240 Vac Power Open / Power Close Damper Motor



Damper Motor

8. Classic 2P Wombat Model Guidelines

8.1 Heater Dimensions

2PW 26 and 26XA



2PW 15, 20 and 20XA



8.2 Service Clearances

Front

- A minimum clearance of 750 mm must be provided in front of the controls access panel.

Sides

- A minimum clearance of 600 mm must be provided both forward and either side of the fan motor access panels.

8.3 Internal Flueing Instructions

- The flue must be installed in accordance with AS 5601 Gas installations
- A 125mm round single or twin wall non-corrosive metal flue is required, and must be terminated with an approved 125mm round metal flue cowl.
- All flues must have a bolted flue sleeve connection to allow for repairs and/or removal of the appliance.



IMPORTANT: Servers with Windows Original Equipment Manufacturer (OEM) licenses are not supported for migration. For licensing questions, contact HP support.

Schedule preparation

Schedule preparation is essential when planning a migration strategy.

Be sure to include adequate time for copying data. Large volumes take time to migrate. Under optimal conditions, an SMP migration requires two to three minutes to migrate 1 GB of data. Using two minutes as a best-case scenario, migrating 500 GB of data might take more than 17 hours.

When a migration starts, the source server reboots to a minimal configuration so that no updates occur on the source server during migration. Only those services required for the migration are enabled.

Applications that normally execute on the server are not available during migration. After the migration is complete, the source server is restored to its pre-migration state.

Schedule the migration to occur at a time when the source server can be offline.

Memory and CPU resources on the application station

Insufficient memory and CPU resources on the application station might degrade performance and cause errors during migration. For best results, close all other applications on the application station before the migration. Open the applications after the migration is complete.

Critical or hardware-dependent application preparation

Some hardware applications are bound to the source server and might need reconfiguration to function as expected following an SMP migration.

For added safety, manually disable critical and hardware-dependent applications before migrating a source server. You can then manually re-enable these applications after the migration is complete.

Manually disabling applications prevents them from starting on the destination server before they are reconfigured for the destination server.

Examples of applications that must be disabled during migration include:

- Applications that rely on unique hardware serial numbers, BIOS or chassis IDs, NICs, MAC addresses, or devices that authenticate a piece of software.
- Applications that store data on a volume different from that of the operating system. SMP retains drive letters (for example, F:) during migration, but hardware differences between the source and destination servers can force the drive letters to change.
- Applications that depend on physical disk identifiers instead of drive letters. Depending on the destination server disk enumeration order and selections made in the SMP Migration Wizard, the contents of a physical disk might have a different sequential identifier on the destination server. In these cases, the application must be reconfigured to use the new physical disk identifiers.

Virtual machine guest tools

Before starting a migration, you must uninstall the guest tools if you are migrating a source virtual machine. The guest tools are not applicable on the destination server and might cause issues with the normal functioning of the network adapters, keyboard, and mouse. After the migration is completed, you can reinstall the Guest tools on the source virtual machine.

Domain controllers

SMP supports migration of domain controllers.

To migrate a domain controller on a source server:

1. Reboot the server.
2. During reboot, press **F8** to boot to Directory Services Restore Mode (DSRM).
3. Launch the SMP Agent in DSRM mode.

Care and cleaning

Cleaning fluff filter

The filters collect all the fluff which accumulates during drying. To ensure that the dryer works perfectly, the fluff filters (micro-fine filter and fine strainer) must be cleaned after every drying cycle.


The warning led is on to remind you this operation.



CAUTION!


Never operate the dryer without fluff filters or with damaged or blocked fluff filters.

1. Open loading door
2. Use a damp hand to clean the micro-fine filter, which is built into the lower part of the loading aperture.

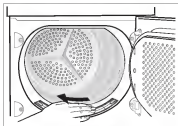


3. After a period of time, a patina due to detergent residue on laundry forms on the filters. When this occurs, clean the filters with warm water using a brush. Remove the filter from the door pulling it out. It can be positioned with the tooth facing to the left or to the right).

After cleaning do not forget to put it back.

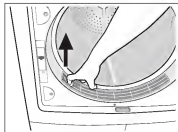

4. Push down unlock button on large mesh filter. Large mesh filter jumps up.

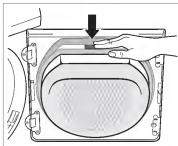

Lorsqu'il est "STANDARD", le téléviseur s'allume sur l'état antérieur, en ON (MARCHE) ou VEILLE.

Lorsqu'il est "VEILLE", le téléviseur est toujours mis en service en position Veille.

• **Réglage pas à pas (OUI/NON)**

Si OUI, les programmes TV (1 à 9) sont réglés immédiatement en appuyant sur un nombre. Si NON, le réglage est effectué seulement après que le test disparaisse.

• **Délai d'attente du chiffre**

C'est le délai d'attente pour poursuivre l'entrée du deuxième chiffre du programme TV 10.

• **Affichage Programme**

Les valeurs de l'affichage Programme peuvent être: Numéro, Réseau, Tous, Aucun.

• **Clavier Verrouillé**

Dans le Mode Commercial, la fonction du menu Clavier Verrouillé est de mettre hors service le Clavier Local du téléviseur pour ce qui est du volume et du contrôle du programme.

• **Programmes libre protection**

Tous les programmes protégés peuvent être libérés à l'aide de cette fonction. Si la fonction "programmes libre protection" est activée ("OUI") tous les programmes sont accessibles à l'utilisateur, si celle-ci est désactivée ("NON"), les programmes protégés peuvent être sélectionnés, mais sans image et sans son.

• **ESP**

Le Mode Programmation d'Economie d'Energie (ESP) contrôle le temps maximal de visualisation autorisé par le système de contrôle.

Il permet à l'établissement qui l'a installé de limiter le temps pendant lequel le téléviseur reste allumé une fois que l'hôte a réglé sa note de chambre.

Cette fonction ESP est indiquée "ESP" dans le menu, sa valeur doit être comprise entre 00 - 99 (en heures). La valeur 00 signifie OFF (ARRÊT).

• **Interface Système**

Cette fonction ne se trouve que dans les appareils de télévision du "système", elle est utilisée pour activer ou désactiver la communication avec le DCM (Module de Communication de Données).

• **Fond Ecran Video**

La fonction du menu "Fond Ecran Video" détermine si la vidéo doit être supprimée et l'audio avec arrêt son, si le canal actuellement appelé n'a aucun signal (Bleu, Noir, Eteint).

• **Auto Scart**

Active/Désactive la commutation automatique vers une source externe Scart (pense péritel).

• **Message de Bienvenue**

Appuyer sur le curseur gauche/droite pour afficher le menu d'entrée du Message de Bienvenue.

Message de Bienvenue, Ligne 1, Ligne 2.

A l'aide du curseur haut/bas vous pouvez écrire les caractères du message.

• **Guide Programme**

La caractéristique de cette fonction est d'activer/désactiver dans une "liste" ou "page" les numéros des programmes avec les réseaux associés.

• **Aide-Mémoire**

Cette fonction du menu est indiquée comme "AIDE-MEMOIRE", et ses états sont "OUI"/"NON".


• **Sécurité**

La fonction du menu "SECURITE" permet à l'utilisateur de sélectionner un des deux états "ELEVÉE" ou "STANDARD". L'état par défaut est "STANDARD".

Lorsque le réglage est sur le Mode Sécurité Elevée, on ne peut accéder au menu d'installation que par une télécommande d'installation institutionnel T374AH.

Lorsque le réglage est sur le Mode Sécurité Standard, on peut accéder au menu d'installation avec une télécommande d'hôte par une suite de nombres (3 1 9 7 5 3 +touche MUTE (MUT)).

SETTING THE SLEEP TIMER



The unit can be turned off automatically at a specified time.

Use the remote control.


1 Press SLEEP while pressing SHIFT.



2 Within 4 seconds, press ◀ or ▶ to specify the time until the power is turned off.

The time changes between 5 and 240 minutes in 5-minute steps.

MULTI JOG is also available in place of ◀ or ▶.



Specified time

While the timer is in operation, the display indication is dimmer than usual.


To check the time remaining until the power is turned off
Press SLEEP once while pressing SHIFT. The remaining time is displayed for 4 seconds.

To cancel the sleep timer

Press SLEEP twice while pressing SHIFT so that "SLEEP OFF" appears on the display.

OTHER FEATURES

DEMO (Demonstration)

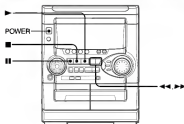

You can enjoy two kinds of DEMO modes on this unit. One is demo, the other one is game demo.

In the demo mode, colorful illumination demonstrates in the display. In the game demo mode, you can play a game.

To switch the two modes to each other, press POWER while pressing ▶ when the power is off.

To activate the demo or the game demo, press ▶ when the power is off.

To deactivate the demo or the game demo, press II.

To play the game demo

1 To start the game demo, press ▶ when the power is off. Three numbers on the display start to run.

2 Press ■ once.

The number on the left side stops.

3 Press ■ twice to stop the remaining two numbers.

Scoring:

20 points are given to start the game.

If all the numbers are equal, 50 points are added to the score.

If not equal, one point is subtracted.

If the gained points reach 9999, you win.

If the gained points fall to 0, you lose.

To reset the game demo

Press II, then press ▶. The game starts again.

To change the probability of equalizing the three numbers

Press ◀ or ▶ repeatedly to select one of the three probability levels when playing the game demo. The tray number indicator in the display changes between 1 and 3. As the tray number increases from 1 to 3, the higher the probability of equalizing.



NOTE

• While playing the game demo, II, ■, ◀, ▶, and ▶ are available only for the game demo. Turn the power on to use these buttons for the functions such as CD playing, etc.

• During the game demo, some indicators unrelated to the actual operation light up on the display.

9.2 Configuration

Click on **Configuration** to display the Configuration page.

Server Device

The **Server Device** page allows you to configure basic settings of the Print Server.

The screenshot shows the 'AirLink 100' web interface for a 'PRINT SERVER'. The top navigation bar includes 'Management', 'Configuration' (selected), 'Tools', and 'Help'. On the left, a sidebar lists 'Configuration' (selected), 'Server Device', 'TCP/IP Protocol', 'NetBEUI Protocol', and 'AppleTalk Protocol'. The main area is titled 'Server Device' and contains the following fields:

- Server Name:** A text box containing 'PS-01D2BC'.
- Location:** An empty text box.
- Admin Contact:** An empty text box.
- Password:** Two text boxes labeled 'New Password' and 'Confirm Again'.
- USB:** A section containing:
 - Port Name:** A text box containing 'PS-01D2BC-U1'.
 - Description:** An empty text box.
 - PJL Printer:** A dropdown menu currently set to 'No'.

At the bottom of the form are 'Save' and 'Cancel' buttons.

Server Name: You can rename the Print Server to a more user-friendly name or keep the factory default name.

Location: You can make note of where the Print Server is located (optional).

Admin Contact: Name of the administrator to contact for help (optional).

Password: You can set a password for the **Web Configuration Utility** so only authorized personnel can access and change the Print Server's configuration.

USB: You can rename the Print Server's port name to a more user-friendly name or keep the factory default name.

PJL Printer: Choosing **Yes** will enable the support for Hewlett-Packard PJP (Printer Job Language) standard for bi-directional printing. (Default is **No**).

Click **Save** to save and activate any configuration changes. Click **Cancel** to cancel the changes.

- ④ IDENTITY CARD** This card, together with the terms of guarantee, is to be provided by your dealer, before the full benefits of guarantee for this appliance.
- ⑤ DÉMARTE-TEMSHARTE** Cette Carte est destinée aux clients. Elle sera émise et remise par le détaillant avant l'installation de l'appareil.
- ⑥ CARTE D'IDENTIFICATION** Accordez aux cardholders de garantie l'accès aux sites Internet de la marque Philips, car ils contiennent les conditions de garantie de cet appareil.
- ⑦ IDENTIFIKATIONSKART** Deze kaart vormt, samen met de garantievoorwaarden, de afsluitende documentatie van de garantie van Philips voor dit apparaat.
- ⑧ CARTA D'IDENTIFICAZIONE** Questa carta ha lo scopo di assicurare l'accesso alle condizioni di garanzia della Philips e dei suoi rivenditori e il documento di garanzia per questo apparecchio.
- ⑨ TARJETA DE IDENTIFICACION** La garantía de este aparato se compone de este libro y de las condiciones de garantía que le entregará su comerciante.
- ⑩ CARTÃO DE IDENTIFICAÇÃO** Este cartão, em conjunto com as condições de garantia, assegura aos clientes, por meio dos sites da Philips, o acesso às condições de garantia do seu aparelho.
- ⑪ LG. FORT** Cette carte a été émise par Philips, et elle constitue la garantie de l'appareil.
- ⑫ IDENTIFIKATIONSKORT** Dette kort sammen med garanti vil blive givet af den lokale Philips forhandler.
- ⑬ IDENTIFIKATIONSKORT** Il Sostegno qualità Philips è la base della nostra garanzia. Per questo la garanzia Philips è valida per tutti i nostri prodotti.
- ⑭ TUNING-IDENTIFIKATIONSKORT** Tuning-identifikationskortet er en del af vores garanti for Philips-produkter.
- ⑮ IDENTIFIKATIONSKORT** Hvert produkt har en garanti, som er en del af vores garanti. Denne garanti er gældende for alle Philips-produkter.

PHILIPS



RC 3119 105 2027.1



2.4 Installing optional drives

The AWS-8248 provides space for three disk drives underneath the work drawer. That is, one floppy disk drive, one hard disk drive and one slim CD-ROM drive. If you wish, you can add an extra hard disk drive and an extra slim CD-ROM drive above the power supply. (See Figs. 2-1 and 2-3.)

1. Remove the six screws at the rear of the work drawer and pull down the power supply assembly using the handle. You will find a drive bay for fixing an HDD and a slim CD-ROM drive.
2. Detach the four screws from the drive bay, and slide out the two drive-support brackets.
3. Attach the HDD by fixing it to the drive support brackets with the six screws.
4. Add the optional CD-ROM (CDR-825-0024) over the HDD, and tighten it with the six screws.
5. Slide the assembled HDD and CD-ROM drive into the drive bay.
6. Attach a 40-pin ribbon cable with two connectors; one being a power connector to the HDD, and the other being a power connector to the CD-ROM.
7. Secure the drive in the drive bay with the screws, and attach this assembly to the work drawer.

To simplify the keyboard legend, cursor-control key symbols are not printed on the keys.

Desired access	Num Lock on	Num Lock off
Number keys on embedded keypad	Type numbers in a normal manner.	
Cursor-control keys on embedded keypad	Hold <Shift> while using cursor-control keys.	Hold <Fn> while using cursor-control keys.
Main keyboard keys	Hold <Fn> while typing letters on embedded keypad.	Type the letters in a normal manner.

Windows keys

The keyboard has two keys that perform Windows-specific functions.

Key	Description
 Windows key	Pressed alone, this key has the same effect as clicking on the Windows Start button; it launches the Start menu. It can also be used with other keys to provide a variety of functions: <  > + <Tab> Activates the next Taskbar button. <  > + <E> Opens the My Computer window. <  > + <F1> Opens Help and Support. <  > + <F> Opens the Find: All Files dialog box. <  > + <R> Opens the Run dialog box. <  > + <M> Minimizes all windows. <Shift> + <  > + <M> Undoes the minimize all windows (<  > + <M>) action
 Application key	This key has the same effect as clicking the right mouse button; it opens the application's context menu.

Hot keys

The computer employs hot keys or key combinations to access most of the computer's controls like screen brightness, volume output and the BIOS utility.

Program tables

Program group COTTONS

care symbols  ; maximum load 5 kg

Program	Laundry Type	Examples for
EXTRA DRY	Heavy weight or multi-layered fabrics	Towelling material, bath robes
CUPBOARD DRY	Fabrics of medium weight, articles not made up of multi-layers	Towel laundry, hand towels
DAMP	Lightweight materials requiring ironing	Cotton shirt and underwear
HAND IRON	Normal cotton and linen articles	Sheets and pillowcases, tablecloths
MACHINE IRON	Cotton and linen articles, to be ironed by rotary ironer or starched laundry	Cotton sheets and pillowcases, tablecloths

Program group EASY CARES

care symbols  ¹ ; maximum load 2.5 kg

Program	Laundry Type	Examples for
EXTRA DRY	Heavy weight or multi-layered fabrics	Sweatshirts, bed linen and table linen
CUPBOARD DRY	Lightweight materials which do not require ironing	Easycare fabric shirts, table linen, baby clothes, socks and underwear
DAMP	Lightweight synthetics and cotton/polyester mixtures requiring ironing	Bed and table linen, easycare fabric shirts and blouses

1) Press the SPECIAL CARE button!

Toetsen en het display op de TV/VIDEO

Behalve met de afstandsbediening, kunt u de meest belangrijke functies van de TV/VIDEO ook bedienen met het locale toetsenbord.


Wanneer de boodschap **Kinderslot** verschijnt, heeft het gebruik van het toetsenbord geen effect.

Schakel het Kinderslot uit, zoals beschreven op pagina 14.

Voor een complete beschrijving van de werking van de functies, moet u de betreffende paragrafen lezen, zoals beschreven voor de afstandsbediening.

Het locale toetsenbord bevindt zich achter het klepje.

- Druk op open rechts van het klepje.
- Het klepje gaat open.

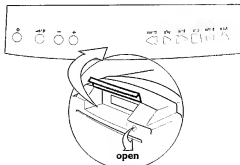

Druk op een cijfer toets van de afstandsbediening om de TV in te schakelen. Het rode lampje wordt groen.

Standby

- Druk op .
- De TV gaat naar standby. Het rode standby-lampje gaat branden.

P - +

De toets  volume / P program kan direct gebruikt worden voor het kiezen van programmanummers.

Door het indrukken van deze toets, schakelt u over tussen programmanummerkeuze en volume-instelling.

Een paar seconden na het wijzigen van het volume zal de toets  volume / P program terugkeren naar de stand programmanummerkeuze.

Volume instellen

- Druk op  volume / P program om over te schakelen naar volume-instelling.
- Druk op + of - om het volume te wijzigen.
- Een balk verschijnt, die het volume-niveau aangeeft.

*Wanneer het Kinderslot ingeschakeld is, heeft het indrukken van + of - geen effect en gedurende enkele seconden verschijnt de boodschap **Kinderslot**.*

Programmanummers kiezen

- Druk op + of - om het gewenste programmanummer te kiezen.
- Het gekozen programma verschijnt. Wanneer de TV op standby stond, zal de TV door het indrukken van + of - ingeschakeld worden en naar het laatst gekozen programma overschakelen.

Listen to digital radio channels

- 1 Press **Q FIND**.
↳ The channel matrix menu is displayed.
- 2 Press **≡ OPTIONS**, then select **[Select list] > [Radio]**.
↳ The radio channel grid appears.
- 3 Select a radio channel and press **OK** to listen.

Update the TV software

Philips continuously tries to improve its products and we recommend that you update the TV software when updates are available.

Ways to update the TV software

You can update the TV software in one of the following ways:

- A: with a USB storage device,
B: when prompted through digital broadcasts, or
C: after being prompted through digital broadcasts.

A: with a USB storage device,

To update with a USB storage device, you need:

- A computer with Internet access
- A USB storage device.

Step 1: Check the current software version

- 1 Press **⬆**.
- 2 Select **[Setup] > [Software settings] > [Current software inf.]**.
↳ The current software information is displayed.
- 3 Write down the software version number.

- 4 To return, press **OK**.

- 5 To exit, press **⬅**.

Step 2: Download and update the latest software version

- 1 Connect a USB storage device.
- 2 Press **⬆**.
- 3 Select **[Setup] > [Update software]**.
- 4 Follow the instructions to load a file onto your USB storage device.
- 5 Connect the USB storage device to your computer, then double-click the file.
↳ A Web page is launched.
- 6 Follow the instructions in the Web page.
 - If the current software version matches the latest software update file, you do not need to update your TV software.
 - If the current software version is smaller than the latest software update file, download the latest software update file to the root directory of your USB device.
- 7 Disconnect the USB storage device from the computer.

B: Update when prompted through digital broadcasts

If you receive digital broadcasts (DVB-T), your TV can automatically receive software updates. When your TV receives a software update, it will prompt you to update the TV software.

- 1 Press **⬆**.
- 2 Select **[Setup] > [Software settings] > [Announcement]**.
- 3 If a message appears to prompt you to update your software, follow the instructions to start the update.
↳ The TV restarts after the software update is complete.


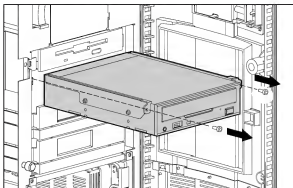


Figure 2-11. Removing a Storage Device from the Removable Media Area

1. Remove the large access panel.
2. Disconnect the power and signal cables from the rear of the storage device.
3. Tower units - open the front bezel door
Rack units - remove the front bezel panel, see page 2-5
4. Remove the retaining screws.
5. Slide the mass storage device out.

Reverse steps 1 to 4 to replace a mass storage device.

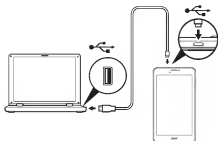

3. Swipe down from the top of the screen to display the notification area and ensure **Connected as a media device** is displayed.

Your device will now be available as a drive in your computer's file explorer. Tap **Connected as a media device** to switch between different connection modes.

Connecting a Bluetooth device

To connect to a Bluetooth device, you must first pair the devices. To do so, do the following:

1. Open the *Application* menu and tap **Settings**, then under *Wireless & networks* tap **Bluetooth**.
2. Turn Bluetooth on and the tablet instantly starts scanning for nearby Bluetooth devices.
3. Tap the device you want to connect to and follow any on-screen instructions.

After the initial pairing, you only need to ensure your tablet's Bluetooth is on and the device is on to connect the two. For more information on connecting to another Bluetooth device, see the device's operating instructions.



Note

Only A2DP stereo headsets (playback only, no microphone) are supported. Please check for updates to the tablet's software which may add support for additional Bluetooth devices (open the *Application* menu and tap **Settings** > **About tablet** > **System updates** > **CHECK NOW**).



REPRODUCCIÓN PROGRAMADA

Se podrá programar un máximo de 30 canciones de cualquiera de los discos introducidos.

Utilice el control remoto

1 Pulse dos veces el botón PRGM estando en el modo de parada.

El indicador PRGM parpadeará en el visualizador.

• Cuando se pulse una vez el botón PRGM en el paso 1, la unidad se pondrá en el modo KARAOKE PROGRAM (página 51).

2 Pulse uno de los botones DISC DIRECT PLAY para seleccionar un disco.

El disco seleccionado se indica en rojo en el visualizador. Vaya al paso siguiente cuando la bandeja deje de girar.

3 Pulse los botones numéricos y el botón +10 para programar una canción.

Ejemplo:

Para seleccionar la canción número 25, pulse los botones +10, +10 y 5.

Para seleccionar la canción número 10, pulse los botones +10 y 0.

VISUALIZACIÓN

- ① Número de programa
- ② Número de la canción seleccionada
- ③ Tiempo de reproducción total de las canciones seleccionadas
- ④ Número total de canciones seleccionadas

4 Repita los pasos 2 y 3 para programar otras canciones.

5 Pulse el botón ◀▶ para iniciar la reproducción.

Para comprobar el programa

Cada vez que se pulse el botón ◀▶ o ▶▶ antes de la reproducción, un número de disco, número de canción y número de programa se visualizarán.

Para borrar el programa

Pulse el botón ■ CLEAR estando en el modo de parada.

Para añadir canciones al programa

Antes de reproducir, repita los pasos 2 y 3. La canción se programará después de la última canción programada.

Para cambiar las canciones programadas

Borre el programa y repita todos los pasos de programación.

NOTA

Durante la reproducción programada, los botones CD EDIT/CHECK, DISC CHANGE y RANDOM no funcionarán.

LECTURE PROGRAMMÉE

On peut programmer un maximum de 30 plages de n'importe lequel des disques en place.

Utiliser la télécommande

1 Appuyer deux fois sur la touche PRGM dans le mode arrêt.

L'indicateur PRGM clignote sur l'affichage.

• Si on appuie une fois sur la touche PRGM à l'étape 1, l'appareil passe au programme de KARAOKE (voir page 51).

2 Appuyer sur une des touches DISC DIRECT PLAY pour sélectionner un disque.

Le disque sélectionné est indiqué en rouge sur l'affichage. Passer à l'étape suivante quand le plateau arrête de tourner.

3 À l'aide des touches numériques et de la touche +10, programmer une plage.

Ejemplo:

Pour sélectionner la vingt-cinquième plage, appuyer sur les touches +10, +10 et 5.

Pour sélectionner la dixième plage, appuyer sur les touches +10 et 0.

AFFICHAGE

- ① Numéro de programme
- ② Numéro de la plage sélectionnée
- ③ Temps de lecture total des plages sélectionnées
- ④ Nombre total de plages sélectionnées

4 Répéter les étapes 2 et 3 pour programmer d'autres plages.

5 Appuyer sur la touche ▶▶ pour démarrer la lecture.

Pour contrôler le programme

À chaque pression sur la touche ◀▶ ou ▶▶ avant la lecture, un numéro de disque, un numéro de plage et un numéro de programme sont affichés.

Pour effacer le programme

Appuyer sur la touche ■ CLEAR dans le mode arrêt.

Pour ajouter des plages au programme

Avant la lecture, répéter les étapes 2 et 3. La plage sera programmée à la suite de la dernière plage.

Pour changer les plages programmées

Effacer le programme puis répéter toutes les étapes.

REMARQUE

Pendant la lecture programmée, les touches CD EDIT/CHECK, DISC CHANGE et RANDOM ne fonctionnent pas.




Comissão Federal de Comunicações Declaração de conformidade


Este dispositivo está em conformidade com o capítulo 15 das normas da FCC. Seu funcionamento está sujeito às duas condições a seguir: (1) Este dispositivo não poderá causar interferência prejudicial; e (2) este dispositivo deverá aceitar qualquer interferência recebida, inclusive interferências que possam causar um funcionamento indesejado. O seguinte fabricante/importador local é responsável por essa declaração:

Produto:	acer Smart Plug
Número do modelo:	SP100
Nome da parte responsável:	Acer America Corporation
Endereço da parte responsável:	333 West San Carlos St. Suite 1500 San Jose, CA 95110 U. S. A.
Pessoa de contato:	Representante Acer
No. do telefone:	254-298-4000
No. fax:	254-298-4147

Lower basket with cutlery basket^{*)}

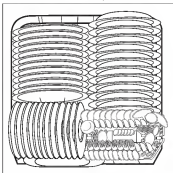

Cutlery basket

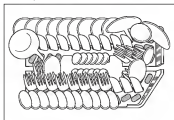

^{*)} If there are cup racks in place on the lefthand side or if beer glass holders are in place, remove them.

What to do, if ...

Try to rectify minor faults on the dishwasher with the aid of the instructions given here. If you call an engineer to resolve a of fault listed here, or to repair a fault caused by incorrect use or installation, a charge will be made even if the appliance is in guarantee.

...Error messages are displayed.

If any of the indicators in the control panel, as listed in the table below, are flashing or are illuminated, you can probably rectify the fault yourself.

Malfunction	Possible cause	Remedy
The programme indicator for the selected wash programme is flashing; the end wash programme indicator is flashing in the following sequence: 1 short flash with approx. 3 seconds pause in between: There is no water entering the dishwasher.	The tap is blocked or furred with lime-scale	Clean the tap
	The tap is turned off.	Turn the tap on.
	The filter (where present) in the threaded hose fitting on the tap is blocked.	Clean the filter in the threaded hose fitting.
	Filters in the base of the washing compartment are blocked.	Press the button for the wash programme that had already started; then cancel the wash programme by pressing RESET (see chapter: Starting a wash programme); Clean out the filters. (See chapter: Cleaning the filters)
	The water inlet hose has not been correctly laid.	Check hose installation.

■ Bakeware:

You can use me to bake cakes either in baking forms or on baking sheets. The material from which the bakeware is made is extremely important.

The most important differences:

1. Black sheet baking forms, coated baking forms, or gold baking forms are the best, since they absorb heat and transfer it to the dough most rapidly, implying for you shorter baking times and lower power consumption.
2. White sheet baking forms reflect the heat, i.e. they repel it. Cakes which you bake in such forms have a longer baking time, do not become so nicely brown, and require a longer baking time. When baking with top/bottom heat, you should therefore not use white sheet baking forms.
3. In the combination mode of top/bottom heat  with microwave  (**where featured**). This cooking function is suitable for baking flans with a fruit topping and filling (cream or cottage cheese) as well as cakes with a low flour content (sponge, nut cakes).

It is not recommended to use this cooking function for baking with a high flour content (large cakes, almond cakes, or bread).

Use only glass, ceramic, porcelain, or heat-resistant plastic bakeware (without metal decorations).

Never use any metal bakeware!

The accessories provided are an exception!

■ Recommendations

Apart from cheesecakes, sponge cakes, and bread, I recommend hot air for everything else. It is more advantageous than by top and bottom heat.

In this heating mode, I bake at several levels simultaneously – quickly and economically – to save you time. I also bake different cakes at the same time, e.g. fruit cakes and almond cakes or large cakes and tartlets. You need only make sure that the prescribed temperatures for the various items roughly coincide. You should also take note that more steam arises when several baking sheets are inserted at any one time. This especially applies to fruit cakes. In the case of very moist fruit, e.g. damsons, therefore bake on only two sheets at most at any one time.

Baking – with top/ bottom heat



Baking – with hot air



Additional Documentation

NAC 800 documentation is available in a number of media formats and is accessible in a variety of ways:

- **Quick-start card** – The Quick-start card provides a high-level overview of the physical deployment options, software installation, post-installation configuration, the Users' Guide, and how to get support.
- **Online help** – Online help is an essential component that assists in the installation, configuration, and ongoing management of NAC 800. You can access the online help by clicking the question mark displayed in the upper-right corner of the primary interface elements.

CRUISE & RANGE PERFORMANCE SKYHAWK

Gross Weight- 2300 Lbs.
Standard Conditions
Zero Wind Lean Mixture

NOTE: Maximum cruise is normally limited to 75% power. Cruise speed for the standard Model 172 is approximately one MPH less than shown below for the Skyhawk configuration.

ALT.	EPM	% BHP	TAS MPH	38 GAL (NO RESERVE)		48 GAL (NO RESERVE)	
				GAL / HOUR	ENDR. HOURS	RANGE MILES	ENDR. HOURS
2500	2700	85	134	5.7	3.9	525	4.9
	2600	79	128	5.6	4.4	570	5.8
	2500	72	123	7.8	4.9	630	6.2
	2400	65	117	7.2	5.3	680	6.7
	2300	58	111	6.7	5.7	730	7.2
	2200	52	105	6.3	6.1	785	7.7
5000	2500	82	134	5.9	4.2	555	5.3
	2400	75	128	8.1	4.7	600	5.8
	2300	68	122	7.4	5.1	645	6.4
	2200	61	116	6.9	5.5	690	6.9
	2100	55	110	6.5	5.9	735	7.4
	2000	49	104	6.0	6.3	780	7.9
7500	2700	78	133	8.4	4.5	600	5.7
	2600	71	127	7.7	4.9	645	6.2
	2500	64	121	7.1	5.3	690	6.7
	2400	58	115	6.5	5.7	735	7.2
	2300	52	109	6.2	6.1	780	7.7
10,000	2650	76	129	7.6	5.0	640	6.3
	2600	67	125	7.3	5.2	685	6.5
	2500	61	119	6.9	5.5	730	7.0
	2400	55	113	6.4	5.9	775	7.5
	2300	49	107	6.0	6.3	820	8.0
12,500	2600	63	123	7.0	5.4	685	6.8
	2500	57	117	6.8	5.8	730	7.3
	2400	51	111	6.3	6.1	775	7.8

Figure 6-4.

LANDING DATA

LANDING DISTANCE ON HARD SURFACE RUNWAY
NO WIND - 40° FLAPS - POWER OFF

GROSS WEIGHT LBS.	APPROACH IAS MPH	@ 31 & 39° F			@ 5000 ft & 50° F			@ 7500 ft & 59° F		
		GROUND ROLL	TOTAL TO CLEAR 50' OBS	TOTAL TO CLEAR 50' F	GROUND ROLL	TOTAL TO CLEAR 50' OBS	TOTAL TO CLEAR 50' F	GROUND ROLL	TOTAL TO CLEAR 50' OBS	TOTAL TO CLEAR 50' F
2300	69	570	1750	540	1310	605	1385	650	1455	

NOTES: 1. Reduce landing distance 10% for each 5 knot headwind.

2. For operation on a dry, grass runway, increase distance (both "ground roll" and "total to clear 50 ft. obstacle") by 20% of the "total to clear 50 ft. obstacle" figure.

Figure 6-5.

COLOR TELEVISION - 90 Days Free Labor, One Year Free Replacement of Parts (Two Years Free Replacement on Color Picture Tube) Must be carried in for service.

WHAT IS COVERED?

You must have proof of purchase to receive warranty service. A sales receipt or other document showing that you purchased the product is considered proof of purchase.

WHAT IS COVERED?

Warranty coverage begins the day you buy your product. For 90 days thereafter, all parts will be repaired or replaced free, and labor is free. From 90 days to one year from the day of purchase, all parts will be repaired or replaced free, but you pay for all labor charges. From one to two years from the day of purchase, you pay for the replacement or repair of all parts except the picture tube, and for all labor charges. After two years from the day of purchase, you pay for the replacement or repair of all parts, and for all labor charges.

All parts, including repaired and replaced parts, are covered only for the original warranty period. When the warranty on the product expires, the warranty on all replaced and repaired parts also expires.

WHAT IS EXCLUDED?

Your warranty does not cover:

- labor charges for installation or setup of the product, adjustment of customer controls on the product, and installation or repair of antenna systems outside of the product.
- product repair and/or part replacement because of misuse, accident, unauthorized repair or other cause not within the control of Philips Consumer Electronics Company.
- reception problems caused by signal conditions or cable or antenna systems outside the unit.
- a product that requires modification or adaptation to enable it to operate in any country other than the country for which it was designed, manufactured, approved and/or authorized, or repair of products damaged by these modifications.
- incidental or consequential damages resulting from the product. (Some states do not allow the exclusion of incidental or consequential damages, so the above exclusion may not apply to you. This includes, but is not limited to, prerecorded material, whether copyrighted or not copyrighted.)
- a product used for commercial or institutional purposes.

WHERE IS SERVICE AVAILABLE?

Warranty service is available in all countries where the product is officially distributed by Philips Consumer Electronics Company. In countries where

Philips Consumer Electronics Company does not distribute the product, the local Philips service organization will attempt to provide service (although there may be a delay if the appropriate spare parts and technical manual(s) are not readily available).

MAKE SURE YOU KEEP...

Please keep your sales receipt or other document showing proof of purchase. Attach it to this owner's manual and keep both nearby. Also keep the original box and packing material in case you need to return your product.

BEFORE REQUESTING SERVICE...

Please check your owner's manual before requesting service. Adjustments of the controls discussed there may save you a service call.

TO GET WARRANTY SERVICE IN U.S.A., PUERTO RICO OR U.S. VIRGIN ISLANDS...

Contact a Philips factory service center (see enclosed list) or authorized service center to arrange repair.

(In U.S.A., Puerto Rico and U.S. Virgin Islands, all implied warranties, including implied warranties of merchantability and fitness for a particular purpose, are limited in duration to the duration of this express warranty. But, because some states do not allow limitations on how long an implied warranty may last, this limitation may not apply to you.)

WARRANTY COVERAGE IN CANADA...

Note: Product Warranty coverage may vary between countries where product is distributed by Philips Consumer Electronics Company. In order to receive full and specific warranty details for products sold and serviced in Canada, please contact Philips at:

1-800-661-6162 (French Speaking)

1-800-531-0039 (English and Spanish Speaking)

REMEMBER...

Please record the model and serial numbers found on the product below. Also, please fill out and mail your warranty registration card promptly. It will be easier for us to notify you if necessary.

This warranty gives you specific legal rights. You may have other rights which vary from state/province to state/province.

Philips, P.O. Box 520890

Miami, FL 33152

(402) 536-4171

Appendices

Problem: Image is reversed.

- ▶ Select "Image" from the OSD and adjust the projection direction. See page 22, 23.

Problem: Lamp burns out or makes a popping sound

- ▶ When the lamp reaches its end of life, it will burn out and may make a loud popping sound. If this happens, the projector will not turn on until the lamp module has been replaced. To replace the lamp, follow the procedures in the "Replacing the Lamp". See page 36.


Problem: LED lighting message

Message	Power LED	Temp LED	Lamp LED
	Amber		
Standby State (Input power cord)	Slow Flashing	○	○
Lamp lighting		○	○
Power on		○	○
Power off (Cooling)	Quick Flashing	○	○
Error (Lamp fail)	○	○	
Error (Thermal fail)	Flashing		○
Error (Fan lock fail)	Flashing	Quick Flashing	○
Error (Over Temp.)	Flashing		○
Error (Lamp Breakdown)	○	○	

 => Light On

○ => Light Off

PUESTA EN HORA DEL RELOJ



Cuando conecte por primera vez el cable de alimentación de CA, la indicación del reloj parpadeará.
Ajuste la hora de la forma siguiente con la alimentación desconectada.

1 Presione el botón ENTER.

La luminosidad del visualizador aumentará ligeramente.



2 Gire MULTI JOG para designar la hora y los minutos.

El tiempo avanza al girar a la derecha y retrocede al girar a la izquierda.

También es posible disponer del botón DOWN o UP. Presione el botón varias veces. Para cambiar el tiempo rápidamente en intervalos de 10 minutos, manténgalo presionado.

3 Presione el botón ENTER.

El reloj se pone en funcionamiento a partir de 00 segundos.

NOTA

Al ajustar el reloj por primera vez después de adquirir la unidad

El contenido del visualizador se borrará. Esto se debe a que el modo de ahorro de energía de la unidad está activado. No se trata de un fallo de funcionamiento. El modo de ahorro de energía se puede cancelar. Consulte los detalles en la página 6.

Para corregir la hora actual

Presione el botón POWER para desconectar la alimentación de la unidad. Presione el botón ENTER y realice los pasos 1 a 5 anteriores.

Para hacer que se visualice la hora actual

Presione el botón CLOCK del controlador remoto. El reloj se visualizará durante 4 segundos.

Para cambiar al modo de 24 horas

Presione el botón VIDEO 1/5.1CH/BAND mientras esté visualizándose la hora actual.


Para volver al modo de 12 horas, repita el mismo procedimiento.

Si la indicación del reloj parpadea mientras la alimentación está desconectada

Esto se deberá a una interrupción del suministro eléctrico. Tendrá que volver a poner en hora el reloj.

Si el suministro eléctrico se interrumpe durante más de 24 horas, todos los ajustes almacenados en la memoria después de haber adquirido la unidad tendrán que volver a memorizarse.

PROGRAMACION DEL TEMPORIZADOR CRONODESCONECTOR



La alimentación de la unidad se puede desconectar automáticamente después del tiempo especificado.


Utilice el controlador remoto.

1 Presione el botón SLEEP.



2 Presione el botón UP o DOWN antes de cuatro segundos para especificar el tiempo hasta que se desconecte la alimentación.

Cada vez que presione el botón, el tiempo cambiará entre 5 y 240 minutos en pasos de 5 minutos.



Tiempo especificado

También es posible seleccionar la hora con MULTI JOG en la unidad principal.

Para comprobar el tiempo restante hasta que se desconecte la alimentación

Presione una vez el botón SLEEP. El tiempo restante se visualizará durante cuatro segundos.

Para cancelar el temporizador cronodesconector

Presione dos veces el botón SLEEP para que "SLEEP OFF" desaparezca del visualizador.

Antenna System:

- Built-in antenna system

9.5 Specific Features

Supported bit rates:

- 11 Mbps: CCK
- 5.5 Mbps: CCK
- 1 Mbps: DBSK
- 2 Mbps: DQPSK

Data Encryption

- 64 bit WEP Encryption


Utility Software:

- APManager to manage wireless LAN, network connection and client access control

9.6 Physical Dimensions

- 97.6 x 60.6 x 13.2 mm, 120.5 x 82 x 29.2 mm with built-in antennas

MCU Block

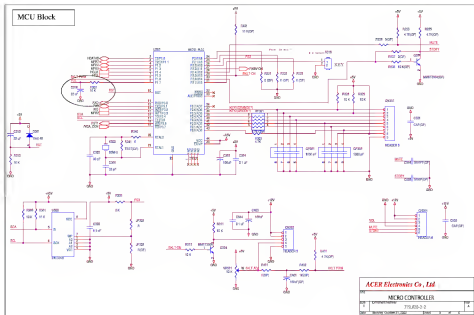




CONTROL SELECCIONAR HD

El control Seleccionar HD le permitirá cambiar rápidamente del modo de operación HD a los modos TV, Radio o PC.

- 1** Si está en el modo HD, presione el botón MENU en el control remoto para mostrar el menú en pantalla modo HD. Se resaltará la opción IMAGEN.
- 2** Presione el botón CURSOR HACIA ARRIBA O HACIA ABAJO hasta que MODE se resalte.
- 3** Presione el botón del CURSOR A LA DERECHA para mover el menú hacia la izquierda y mostrar las opciones de MODE.
- 4** Presione el botón CURSOR HACIA ARRIBA O HACIA ABAJO para seleccionar TV, MODO RADIO o MODO PC.
- 5** Presione el botón del CURSOR A LA DERECHA para activar el control del modo resaltado.

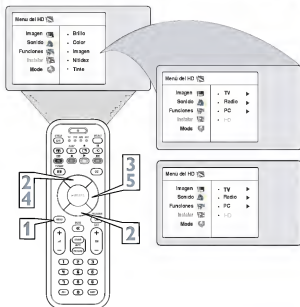

Example directions in this guide	What to do in the user interface
Select Controller > VSCs > [VSC-name] >> Configuration.	On a non-teamed MSM7xx controller Expand the Controller branch (click its + symbol), expand the VSCs branch, select a [VSC-name], then select Configuration on the main menu. On an MSM7xx controller team In the Network Tree on the team manager, expand the Team: [team-name] branch (click its + symbol), expand the VSCs branch, select a [VSC-name], then select Configuration on the main menu.
For Password specify secret22 .	In the Password field enter the text secret22 exactly as shown.

New in this release

New CLI commands in this release are identified by the text [New](#) in the left margin. This is done in the table of contents, alphabetical list of commands, and [Chapter 2: CLI commands](#).

HP support

For support information, visit www.hp.com/networking/support and for **Product Brand**, select **ProCurve**. Additionally, your HP-authorized networking products reseller can provide you with assistance.

Before contacting support

To make the support process most efficient, before calling your networking dealer or HP Support, you first should collect the following information:

Collect this information	Where to find it
Product identification.	On the rear of the product.
Software version.	The service controller management tool Login page.
Network topology map, including the addresses assigned to all relevant devices.	Your network administrator.

INSTALLATION INSTRUCTIONS

WARNINGS



- This appliance must be installed by a qualified electrician/competent person. Safety may be impaired if installation is not carried out in accordance with these instructions.
- This appliance must be earthed.
- Do not remove the screws from the earth tab extending from the oven mains terminal block (Fig. 1).
- Before connecting the appliance make sure that the voltage of your electricity supply is the same as that indicated on the rating plate. This is situated on the lower front frame of the appliance and can be seen upon opening the door. Alternatively the rating plate may also be found on the back or top of some models (where applicable).
- Do not alter the electrical circuitry of this appliance.

CHOICE OF ELECTRICAL CONNECTION

- The appliance should be operated using at least 6mm² twin core and earth PVC insulated multicore cable. Please choose from the most appropriate after reading the descriptions:
- By connecting the appliance to a cooker point having a double pole isolating switch providing at least 3mm contact separation in all poles and protected with a fuse or miniature circuit breaker at your mains fuse box.
- If you wish to connect an oven and a hob to a cooker point you can, by connecting the oven and hob separately to the cooker point. See Fig. 2.

NOTE: It is good practice to :

- Fit an Earth Leakage Circuit Breaker to your house wiring
- Wire your appliance to the latest IEE regulations




Fig 1





Fig 2

3. Вставьте в корпус дистанционного управления Ассет EZ800

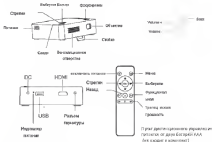

4. Установка на эксплуатацию

1. Перед началом работы

- (1) Включите проектор с помощью прилагаемого адаптера питания.
- (2) Система издается звуковые уведомления на состоянии с батареек.

2. Нажмите кнопку питания на корпусе проектора, чтобы включить проектор.

3. На главном экране с помощью стрелок (на корпусе проектора или пульта дистанционного управления) выберите функцию: (EZWin Mobile, EZMonitor, EZWin PC, EZCast, HDMI, USB, DVI, Setting (Настройка)).



Main Chassis				
Main Chassis				
0136	IC-Sprng	3504 101 32081	2457	Cap, 670p, 10%, 500V, Ceramic . . .
0137	IC-Sprng	3504 101 32081	2458	Cap, 82n, 10%, 100V, Metallized Polyester . . .
0141	IC-Sprng	3504 101 32081	2459	Cap, 1n, 5%, 25V, Ceramic . . .
0211	Connector, 2 Pin	2422 025 16269	2460	Cap, 47n, 20%, 50V, Electrolytic . . .
0212	Connector, 2 Pin	2422 025 16375	2461	Cap, 670p, 5%, 50V, Ceramic . . .
0213	Connector, 2 Pin	2422 025 16375	2462	Cap, 10u, 20%, 100V, Electrolytic . . .
0221	Connector, 4 Pin	2422 025 15563	2463	Cap, 10u, 10%, 63V, Metallized Polyester . . .
0222	Connector, 2 Pin	2422 025 10646	2464	Cap, 670p, 5%, 50V, Ceramic . . .
0223	Socket, Cinch, 9 Pin	2422 026 05236	2465	Cap, 100p, 5%, 50V, Ceramic . . .
0225	Socket, MDM, 10 Pin	2422 026 04926	2466	Cap, 1u, 400/-20%, 10V, Ceramic . . .
0226	Socket, MDM, 8 Pin	2422 026 04926	2467	Cap, 6u, 400/-20%, 10V, Ceramic . . .
1000	Tuner, W/ PLL	2422 542 90141	2468	Cap, 100n, 10%, 10V, Ceramic . . .
1001	Filter, 50W, 45MHz75	2422 549 44327	2469	Cap, 1n, 10%, 50V, Ceramic . . .
1121	Connector, 3 Pin	2412 020 00725	2470	Cap, 2n, 10%, 50V, Ceramic . . .
1124	Connector, 4 Pin	2422 025 10482	2471	Cap, 100n, 10%, 63V, Metallized Polyester . . .
1300	Filter, Ceramic, 40MHz	2422 025 04856	2472	Cap, 1n, 10%, 50V, Ceramic . . .
1306	Connector, 8 Pin	2422 025 04856	2473	Cap, 470u, 20%, 10V, Electrolytic . . .
1302	Socket, CRT, 9 Pin, N-Wheel	2422 500 80076	2474	Cap, 22u, 20%, 25V, Electrolytic . . .
1500	Fuse, 4A, 250V, IEC	2422 086 10914	2475	Cap, 470u, 20%, 10V, Electrolytic . . .
1600	Switch, Tactile	2422 132 07467	2476	Cap, 47u, 20%, 16V, Electrolytic . . .
1601	Switch, Tactile	2422 128 02742	2477	Cap, 1u, 10u, 50V, Ceramic . . .
1602	Switch, Tactile	2422 128 02742	2478	Cap, 1n, 10%, 50V, Ceramic . . .
1603	Switch, Tactile	2422 128 02742	2479	Cap, 470n, 20%, 275V, Metallized Polypropylene . . .
1604	Switch, Tactile	2422 128 02742	2480	Cap, 2n, 10%, 1000V, Ceramic . . .
1621	Crystal, 12MHz	2422 543 01268	2481	Cap, 2n, 10%, 1000V, Ceramic . . .
1622	Connector, 8 Pin	2422 025 04856	2482	Cap, 220u, 20%, 200V, Electrolytic . . .
2001	Cap, 100n, 10%, 16V, Ceramic . . .	3508 017 31040	2483	Cap, 1n, 20%, 250V, Ceramic . . .
2002	Cap, 100u, 20%, 16V, Electrolytic . . .	3508 017 31040	2484	Cap, 150n, 50V, CER, 0603, X7R . . .
2003	Cap, 22p, 5%, 50V, Ceramic . . .	3508 016 32290	2485	Cap, 22u, 20%, 50V, Electrolytic . . .
2004	Cap, 22p, 5%, 50V, Ceramic . . .	3508 016 32290	2486	Cap, 1n, 10%, 50V, Ceramic . . .
2005	Cap, 47n, 400/-20%, 50V, Ceramic . . .	3508 024 44730	2487	Cap, 1n, 10%, 2000V, Ceramic . . .
2006	Cap, 470u, 20%, 10V, Electrolytic . . .	3508 025 14710	2488	Cap, 50p, 10%, 50V, Ceramic . . .
2007	Cap, 10u, 20%, 25V, Electrolytic . . .	3508 029 31090	2489	Cap, 50p, 5%, 50V, Ceramic . . .
2101	Cap, 47n, 400/-20%, 10V, Ceramic . . .	3508 017 44740	2490	Cap, 22u, 20%, 50V, Electrolytic . . .
2102	Cap, 22p, 5%, 50V, Ceramic . . .	3508 016 32290	2491	Cap, 15n, 10%, 50V, Ceramic . . .
2103	Cap, 33p, 10%, 50V, Ceramic . . .	3508 017 33310	2492	Cap, 4n, 10%, 50V, Ceramic . . .
2104	Cap, 33p, 10%, 50V, Ceramic . . .	3508 017 33310	2493	Cap, 470n, 400/-20%, 10V, Ceramic . . .
2105	Cap, 10u, 20%, 25V, Electrolytic . . .	3508 029 31090	2494	Cap, 1n, 10%, 50V, Ceramic . . .
2106	Cap, 10u, 20%, 25V, Electrolytic . . .	3508 029 31090	2495	Cap, 2n, 10%, 50V, Ceramic . . .
2111	Cap, 22p, 5%, 50V, Ceramic . . .	3508 016 32290	2496	Cap, 2n, 20%, 16V, Electrolytic . . .
2112	Cap, 22p, 5%, 50V, Ceramic . . .	3508 016 32290	2497	Cap, 1n, 10%, 2000V, Ceramic . . .
2113	Cap, 22p, 5%, 50V, Ceramic . . .	3508 016 32290	2498	Cap, 100n, 10%, 16V, Ceramic . . .
2122	Cap, 22p, 5%, 50V, Ceramic . . .	3508 017 33310	2499	Cap, 47u, 20%, 25V, Electrolytic . . .
2123	Cap, 1u, 400/-20%, 10V, Ceramic . . .	3508 017 41050	2500	Cap, 1n, 10%, 50V, Ceramic . . .
2124	Cap, 33p, 10%, 50V, Ceramic . . .	3508 017 33310	2501	Cap, 33p, 20%, 50V, Ceramic . . .
2125	Cap, 1u, 400/-20%, 10V, Ceramic . . .	3508 017 41050	2502	Cap, 33p, 20%, 50V, Ceramic . . .
2126	Cap, 10u, 20%, 25V, Electrolytic . . .	3508 029 31090	2503	Cap, 10u, 20%, 16V, Electrolytic . . .
2134	Cap, 1u, 400/-20%, 10V, Ceramic . . .	2620 552 95731	2504	Cap, 100n, 10%, 16V, Ceramic . . .
2135	Cap, 22p, 5%, 50V, Ceramic . . .	3508 016 32290	2505	Cap, 100n, 10%, 16V, Ceramic . . .
2136	Cap, 22p, 5%, 50V, Ceramic . . .	3508 016 32290	2506	Cap, 1u, 400/-20%, 10V, Ceramic . . .
2137	Cap, 22p, 5%, 50V, Ceramic . . .	3508 017 33310	2507	Cap, 100n, 10%, 16V, Ceramic . . .
2163	Cap, 22p, 400/-20%, 10V, Ceramic . . .	3508 017 22525	2508	Cap, 220u, 20%, 16V, Electrolytic . . .
2201	Cap, 4n, 10%, 50V, Ceramic . . .	3508 017 34720	2509	Cap, 820p, 10%, 50V, Ceramic . . .
2202	Cap, 33p, 5%, 50V, Ceramic . . .	3508 016 33310	2510	Cap, 10u, 20%, 16V, Electrolytic . . .
2203	Cap, 47n, 400/-20%, 10V, Ceramic . . .	3508 017 44740	2511	Cap, 1n, 5%, 25V, Ceramic . . .
2204	Cap, 10u, 20%, 50V, Electrolytic . . .	3508 028 51090	2512	Cap, 1n, 5%, 25V, Ceramic . . .
2206	Cap, 33p, 5%, 50V, Ceramic . . .	3508 016 33310	2513	Cap, 220p, 5%, 50V, Ceramic . . .
2207	Cap, 100n, 10%, 16V, Ceramic . . .	3508 017 31040	2514	Cap, 100u, 20%, 10V, Electrolytic . . .
2208	Cap, 100n, 10%, 16V, Ceramic . . .	3508 017 31040	2515	Cap, 33p, 10%, 50V, Ceramic . . .
2209	Cap, 100n, 10%, 16V, Ceramic . . .	3508 017 31040	2516	Cap, 33p, 10%, 50V, Ceramic . . .
2210	Cap, 22n, 10%, 10V, Ceramic . . .	3508 017 32240	2517	Cap, 10u, 20%, 100V, Electrolytic . . .
2211	Cap, 1n, 5%, 25V, Ceramic . . .	3508 016 31020	2518	Cap, 10u, 20%, 100V, Electrolytic . . .
2212	Cap, 22n, 10%, 10V, Ceramic . . .	3508 017 32240	2519	Cap, 33n, 10%, 16V, Ceramic . . .
2221	Cap, 22n, 10%, 10V, Ceramic . . .	3508 017 32230	2520	Cap, 15n, 10%, 50V, Ceramic . . .
2222	Cap, 22n, 10%, 10V, Ceramic . . .	3508 017 32230	2521	Cap, 10u, 20%, 16V, Ceramic . . .
2223	Cap, 22n, 10%, 10V, Ceramic . . .	3508 017 32230	2522	Cap, 10u, 20%, 16V, Ceramic . . .
2300	Cap, 33p, 5%, 50V, Ceramic . . .	3508 016 33310	2523	Cap, 10u, 20%, 16V, Ceramic . . .
2301	Cap, 33p, 5%, 50V, Ceramic . . .	3508 016 33310	2524	Cap, 10u, 20%, 16V, Ceramic . . .
2302	Cap, 33p, 5%, 50V, Ceramic . . .	3508 016 33310	2525	Cap, 10u, 20%, 16V, Ceramic . . .
2303	Cap, 33p, 5%, 50V, Ceramic . . .	3508 016 33310	2526	Cap, 10u, 20%, 16V, Ceramic . . .
2304	Cap, 47n, 20%, 250V, Metallized Polyester . . .	2022 165 45473	2527	Cap, 10u, 20%, 16V, Ceramic . . .
2405	Cap, 47n, 20%, 160V, Electrolytic . . .	2020 021 91139	2528	Cap, 10u, 20%, 16V, Ceramic . . .
2406	Cap, 270n, 5%, 250V, Metallized Polypropylene . . .	3508 033 00558	2529	Cap, 10u, 20%, 16V, Ceramic . . .
2420	Cap, 100n, 10%, 16V, Ceramic . . .	3508 017 31040	2530	Cap, 10u, 20%, 16V, Ceramic . . .
2421	Cap, 100n, 10%, 16V, Ceramic . . .	3508 017 31040	2531	Cap, 10u, 20%, 16V, Ceramic . . .
2423	Cap, 82n, 5%, 186V, Metallized Polypropylene . . .	3508 033 00647	2532	Cap, 10u, 20%, 16V, Ceramic . . .
2424	Cap, 100n, 10%, 16V, Ceramic . . .	3508 033 00647	2533	Cap, 10u, 20%, 16V, Ceramic . . .
2426	Cap, 1n, 5%, 25V, Ceramic . . .	3508 016 31020	2534	Cap, 10u, 20%, 16V, Ceramic . . .
2427	Cap, 100n, 400/-20%, 25V, Ceramic . . .	3508 023 41040	2535	Cap, 33n, 400/-20%, 16V, Ceramic . . .
2428	Cap, 47n, 20%, 16V, Electrolytic . . .	3508 029 34790	2536	Cap, 22n, 10%, 25V, Ceramic . . .
2429	Cap, 22n, 400/-20%, 16V, Ceramic . . .	3508 017 34790	2537	Cap, 22n, 10%, 25V, Ceramic . . .
2430	Cap, 10u, 20%, 16V, Ceramic . . .	3508 016 31020	2538	Cap, 10u, 20%, 16V, Ceramic . . .
2444	Cap, 470u, 20%, 16V, Electrolytic . . .	3508 025 24710	2539	Cap, 100n, 10%, 16V, Ceramic . . .
2446	Cap, 470u, 20%, 16V, Electrolytic . . .	3508 025 24710	2540	Cap, 1u, 400/-20%, 10V, Ceramic . . .
2447	Cap, 22n, 20%, 250V, Electrolytic . . .	2020 012 93596	2541	Cap, 1u, 400/-20%, 10V, Ceramic . . .
2452	Cap, 22n, 20%, 25V, Ceramic . . .	3508 016 31020	2542	Cap, 47n, 20%, 16V, Ceramic . . .
2455	Cap, 10u, 20%, 16V, Electrolytic . . .	3508 028 21090	2543	Cap, 1u, 400/-20%, 10V, Ceramic . . .

External display devices

You can connect an external (VGA) monitor or projector to your computer's external display port. See the section entitled "Display" for information on using the computer's simultaneous display and multi-display features.

Use the Fn + F5 hot key to toggle the display setting between the computer's LCD panel and the external display device. See "Hot keys" for more information.

English

Oven Door Glass

The oven door is fitted with three glass panels mounted one behind the other. The inner panels may be removed for cleaning.




Warning: Carry out the following steps only when the oven door is unhinged! When left on its hinges, the door could rise rapidly due to the lighter weight when the glass is removed and could cause injury.



Important: Using force, especially on the edges of the front glass panel, may break the glass.


Removing the top door glass

1. Unhinge the oven door and place it on a soft, flat surface with the handle facing down.
2. Take hold of the upper glass panel at the lower edge and slide it against the spring pressure in the direction of the oven door handle until it is free at the base.
3. Raise the panel **gently** at the base and pull out.

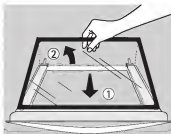

Removing the middle door glass

1. Grip the bottom edge of the middle glass panel and push it in the direction of the oven door handle until it is free at the base.
2. Raise the panel gently at the base and pull out.

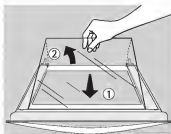

Clean the glass door panels

Menu Mode

This MP3/Storage Drive provides a Menu switching button that includes most function designed for Acer Multi-functional MP3/Storage Drive. With this Menu switching button, in addition to switch between Music Playback, FM Radio or Recording mode, EQ setting or any other setting for the MP3/Storage Drive can be also adjusted quickly and easily.

AIWA CO.,LTD.

Removing the Front I/O and Card Reader Boards

1. See "Removing the Side Panel" on page 30.
2. See "Removing the Front Bezel" on page 31.
3. See "Removing the Heat Sink Fan Assembly" on page 32.
4. See "Removing the Processor" on page 33.
5. See "Removing the Optical Drive" on page 34.
6. Disconnect one end of the USB, and audio cables from the I/O and card reader boards, then open the cable retention clip.

NOTE: You can see IEEE1394 cable on the image below this chapter is based on an X3810 sample. Please notice that X3910 does not have IEEE1394 port on front panel.



7. Open the cable retention clip and disconnect the SATA cable, LED cable, and the other end of the USB, 1394, and audio cables from the mainboard.



C11 Label for Handset System Device Label (PHI)

For Philippines Sku

(A) Label made by vendor

Material: 双张典型钢板纸 光面

Printing: Black

Size: 58.2X58mm

PN:



工厂打印后:



DUO SIM



Single SIM

Code 编码说明

Acer 22 Code SN : P P P P P P P P Y W W S S S S M M V V

P P P P P P P P : Acer PN

Y W W : 3 numeric of Year & Week code

S S S S : 5 unique hexadecimal code , by manufacture base & reset each week (0-9,A,B,C,D,E,F 16 Code)

M M : manufacture code

V V : Eng. Version code

Acer SNID : Y W W d d d d d M M

Y W W : 3 numeric of Year & Week code

d d d d d : 5 unique decimal number transfer from S S S S S of Acer 22_Code_SN.

Transfer rule for S1 S2 S3 S4 S5 :

D d d d d = S1 * 164 + S2 * 163 + S3 * 162 + S4 * 16 + S5

001FD -> 000609 (= 1 * 162 + 15 * 16 + 13)

M M : manufacture code (same as above M M)